

JS16

NO.	DESCRIPTION	PART NO.	QTY	NO.	DESCRIPTION	PART NO.	QTY
1	BOLT (M5x20L)	Z-05-200	6	26	TRIGGER SPRING	1013-T-006	1
2	EXHAUST COVER	630-C-003	1	27	PIN STOPPER O-RING	CT64-M-008	2
3	CAP SPRING	630-H-006	1	28	TRIGGER	1013-T-001	1
4	EXHAUST SEAL	630-H-002	1	29	TRIGGER PIN	630-T-008	1
5	CAP	1013-C-001	1	30	NOZZLE	JS11-B-007	1
6	CAP O-RING	630-H-004	1	31	MAGAZINE A PART ASSEMBLY	JS11-M-P001	1
7	GASKET	630-C-002	1	32	DRIVER GUIDE	JS11-G-001	1
8	HEAD VALVE O-RING	630-H-003	2	33	SPACER ASSEMBLY	JS11-G-P001	1
9	HEAD VALVE	1013-H-001	1	34	PUSHER	JS15M-M-003	1
10	HEAD VALVE STOPPER	630-H-005	1	35	MAGAZINE B PART ASSEMBLY	JS15-M-P002	1
11	HEAD VALVE SEAL O-RING	630-H-009	1	36	RUBBER HEEL	JS15-L-001	1
12	COLLAR	630-A-004	1	37	SCREW BOLT	JS15-M-014	2
13	PISTON O-RING	1013-P-003	1	38	PUSHER GUIDE	JS15-M-013	2
14	PISTON ASSEMBLY	JS11-P-P002	1	39	PUSHER SPRING	JS15-M-004	2
14A	PISTON SET	JS11-P-P001	1	40	RETAINER	JS10-M-010	2
15	CYLINDER	1013-A-001	1	41	CLICK LEVER PIN	1013-L-003	1
16	BUMPER	1013-A-003	1	42	CLICK LEVER SPRING	JS12-L-004	1
17	BODY	1013-B-201	1	43	CLICK LEVER	JS15-L-002	1
18	END CAP O-RING	422-H-004	1	44	BOLT (M5x22L)	Z-05-220	1
19	END CAP	630-B-002	1	45	SPRING WASHER (for M5)	W-05	1
20	VALVE SEAL	1013-V-013	1	46	LOCK NUT (for M5)	NN-05	1
21	VALVE PLUNGER	1013-V-007	1	47	AIR PLUG	9032-B-005	1
22	PLUNGER	1013-V-010	1	48	PLUG CAP	9032-B-006	1
23	PLUNGER O-RING	1013-V-008	1	49	GRIP	1013-B-004	1
24	PLUNGER CAP O-RING	1013-V-011	1				
25	PLUNGER CAP	1013-V-012	1				

