



## W.C. Niche Installation Guide


**\*Note\*** LED light strip must be integrated prior to installation.  
 Visit W.C. Niche product page > Specifications + Install Guides >  
 "LED Light Integration" for instructions

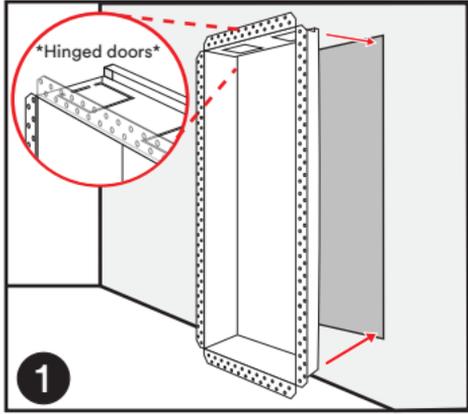


Dry fit body into vent opening.  
 Hinged doors should be on the top.

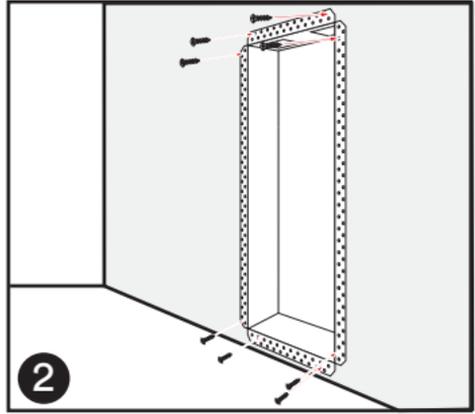


Ensure flange is flat to the wall.  
 Use screws to fasten as needed.

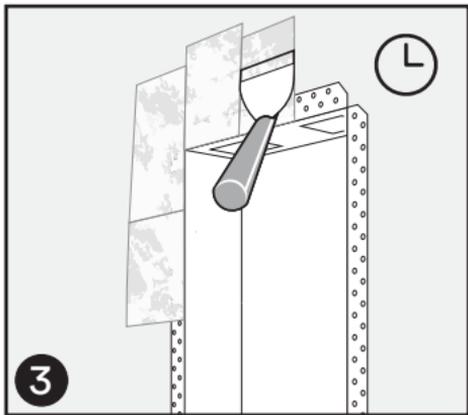


Tape and mud drywall compound  
 to cover flange. Allow to dry.  
 Sand and repeat as needed.

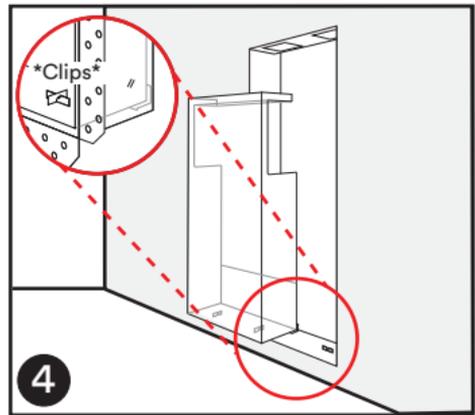

Hover door panel parallel to  
 base until clips are aligned.  
 Drop-in to engage.

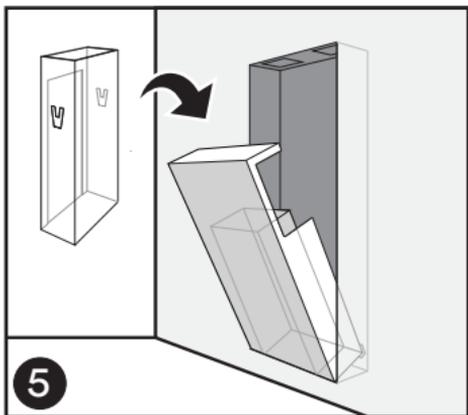

Position inner garbage bin to your  
 liking. Hide your other  
 bathroom-y stuff.

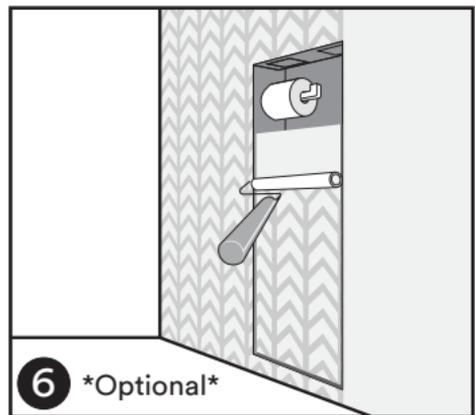

**\*Optional\***

Paint or wallpaper to customize.  
 Install toilet paper holder.

### Additional Support

support@ariavent.com / www.ariavent.com

### Patent information

www.ariavent.com/pages/patents