RIGHT BY YOUR SIDE,
WHEREVER YOU ARE

wedi is a family owned company that offers over 37 years of experience as your specialist and partner in premium 100% waterproof and mold proof, directly tileable building panels and customizable shower systems. The product systems install in a comprehensive, modular step-by-step process. The components are lightweight, durable and clean to work with.

Wherever you are in the building industry, we are right by your side with expertise, performance and passion. Be sure to ask your local Technical Sales Support Manager about our competitive 10, 15 and 20-year warranties!

wedi Shower niche

wedi Sanoasa® Bench

wedi Fundo Riolito® neo

wedi Sanbath® floating wash basin with channel

PREMIUM SHOWER SYSTEMS,
MAXIMUM BENEFITS

100% waterproof throughout product & installation system

Complete range of shower systems and accessories, easily customizable

Ready to tile upon installation – same day

Tested, certified and proven product systems

wedi Warranty – unique coverage and programs for 10, 15 & 20-year warranties

Fast and clean modular installation processes

...wedi®

wedi
1160 Pierson Drive
Batavia, IL 60510

Toll Free: 877-933-9334
Phone: 847-357-9815
Fax : 847-357-9819

info@wedicorp.com
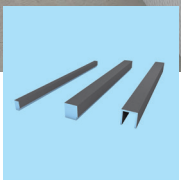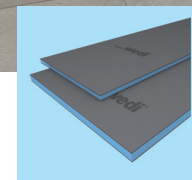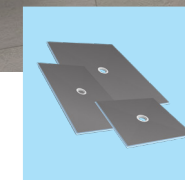www.wedicorp.com   facebook.com/wedicorp/   @wedicorp   youtube.com/wedicorp
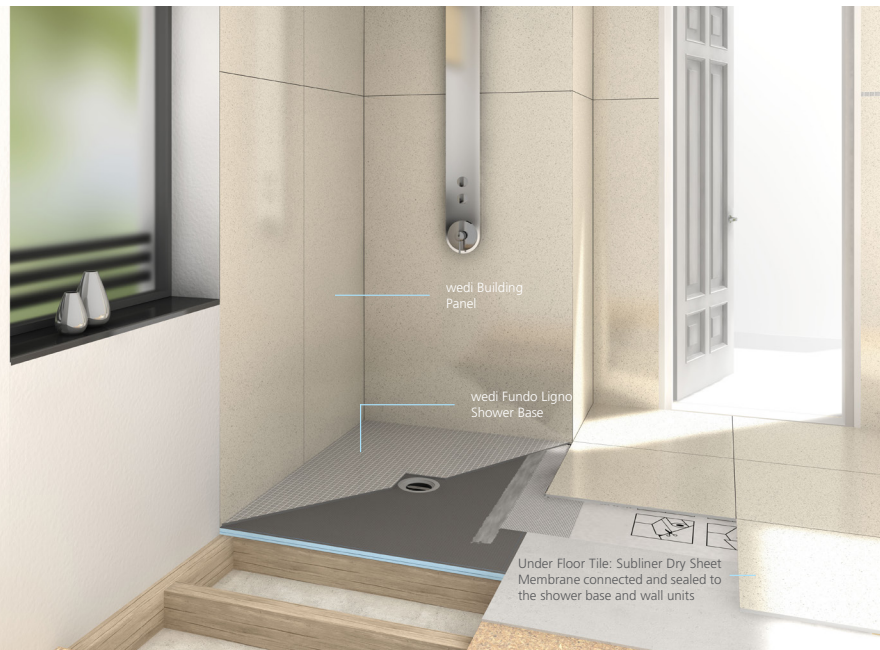
wedi Shower Systems
Innovation. System. Quality.

...wedi®
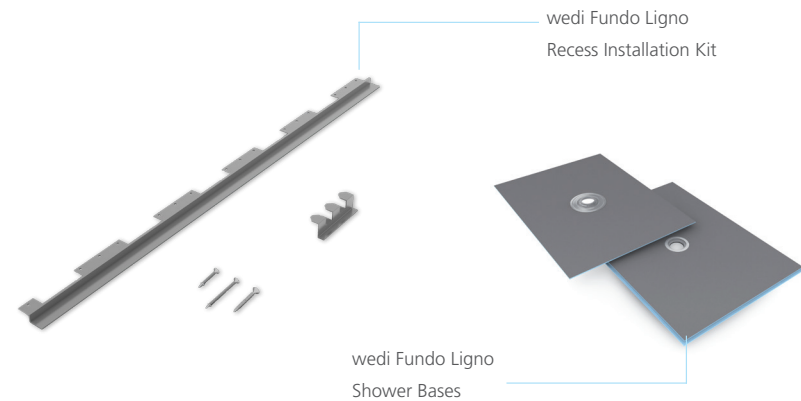
US7000148

US   www.wedicorp.com

One of the newest Fundo models with a floor level ¾ in. profile designed especially for recessing a shower base into a suspended floor structure to create an even floor, barrier-free entry shower. Like all wedi shower bases it is pre-sloped, and waterproof. It comes with 4 in. x 4 in. drain cover and is customizable on-site. Use with our new wedi Fundo Ligno Recess Installation Kit!
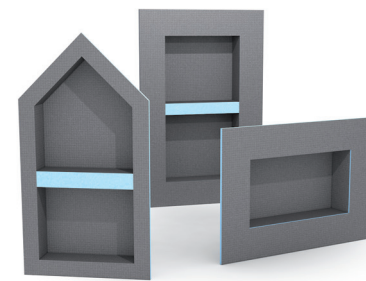
wedi Vapor 85 and wedi Sealant 620

For steam rooms which are constantly under heavy strain. wedi Vapor 85 is both a panel type sealing system and a building board with structural vapor barrier properties. Use wedi Sealant 620 to water and vaporproof the entire system.
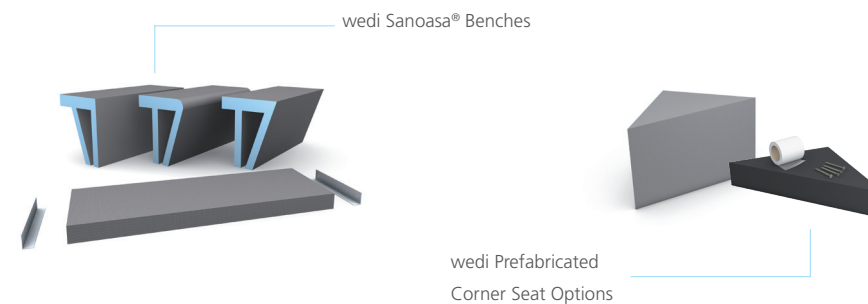
wedi Shower Niches

wedi Shower Niches are the perfect fit for all your shower accessories. They come in a variety of size options and are a great addition to any kind of shower design that you may have.

Our goal is to make your shower building process as seamless and easy as possible with little room for planning mistakes. We've created several kit options based on the shower you're looking to create. All items in the kit, including the bases, can be purchased separately.

wedi Fundo Ligno
Recess Installation Kit

wedi Fundo Ligno
Shower Bases

wedi Shower Kit – Primo® (Offset or Center Location Point Drain)

*Found in each wedi Fundo Primo kit:

- Fundo Primo Shower Base
- wedi 36 in. or 48 in. x 60 in. x 1/2 in. Building Panels
- wedi Full Foam Curb, Lean
- wedi Fundo Kit Drain Standard

- wedi Joint Sealant (10.5 oz. tubes)
- wedi Fastener Kit
- wedi Corner Putty Knife
- wedi Mixing Valve Flexi Collar
- wedi Flexi Collar

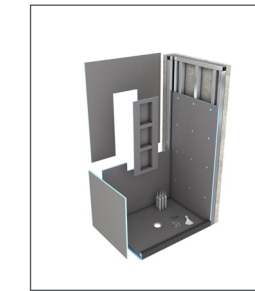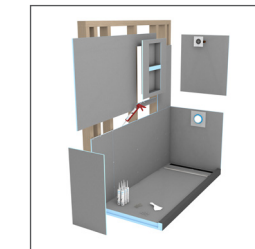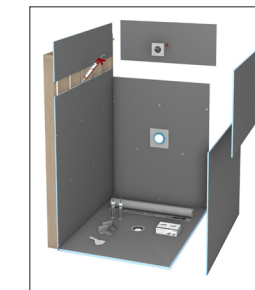### wedi Prefabricated Shower Seats and Benches

wedi prefabricated shower seats and benches install much quicker and easier than metal tray or concrete seats. The smart construction enables an unequal freedom of visual design; both the seating areas and the carrier elements can not only be positioned the way you like, but also their shapes and sizes can be modified to suit.

wedi Shower Kit – Riolito® neo (Linear Drain)

*Found in each wedi Fundo Riolito neo kit:

- Fundo Riolito neo Line Module
- Fundo Riolito neo Extension Module
- wedi 36 in. x 60 in. x 1/2 in. Building Panels
- wedi Full Foam Curb, Lean
- wedi Riolito Drain Kit

- wedi Fundo Riolito Standard Cover Plate
- wedi Joint Sealant (8 10.5 oz tubes)
- wedi Fastener Kit
- wedi Corner Putty Knife
- wedi Mixing Valve Flexi Collar
- wedi Flexi Collar

wedi Building Panel

wedi Fundo Ligno Shower Base

Under Floor Tile: Subliner Dry Sheet Membrane connected and sealed to the shower base and wall units

wedi Sanoasa® Benches

wedi Prefabricated Corner Seat Options

wedi Shower Kit – Ligno® (Curbless Access)

*Found in each wedi Fundo Ligno kit:

- Fundo Ligno Shower Base
- wedi 36 in. OR 48 in. x 60 in. x 1/2 in. Building Panels
- wedi Fundo Kit Drain Standard
- wedi Joint Sealant (10.5 oz tubes)
- wedi Sealant 620 (10.5 oz tubes)
- wedi Fastener Kit

- wedi Corner Putty Knife
- wedi Mixing Valve Flexi Collar
- wedi Flexi Collar
- wedi Subliner Dry Mat
- wedi Subliner Dry Sealing Tape Outside Corner