


No-See Receptacle Mount Installation Guide

Materials Needed


- Pre-cut piece of surface material for tray insert
 - Size will vary depending on model
- Bonding material (will vary depending on surface)
- 4x self tapping screws

Materials Included


- No-See Receptacle
 - Components: Tray, Body, Base
- Utility box (with screws)

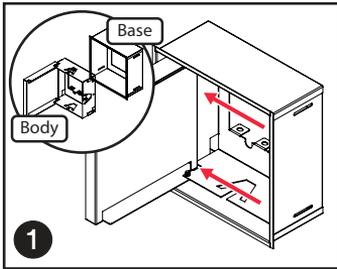


1 Disengage Body from Base by pushing firmly towards the hinged walls' innermost corner with the door ajar.

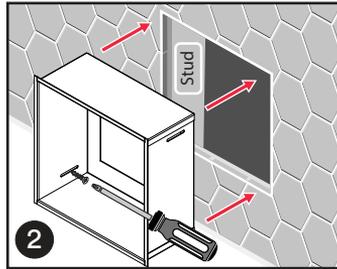


2 Dry fit Base into wall. Fasten base to stud using provided pilot holes as necessary.

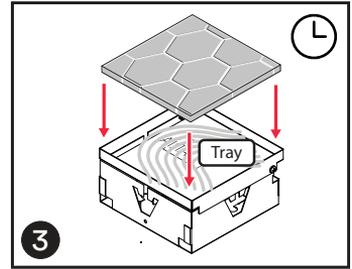


3 Apply silicone in Tray. Set pre-cut Tray insert into place. Allow time to cure.

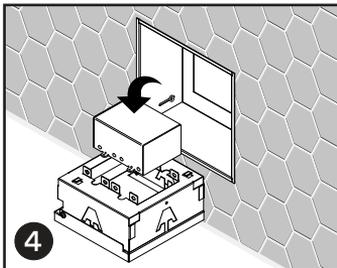

4 Using the screws in the utility box, fasten the utility box to the rear of body component.

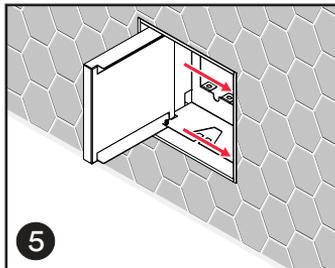

5 Re-engage body by aligning latches and pushing firmly towards the inner corners opposite of the hinged door.

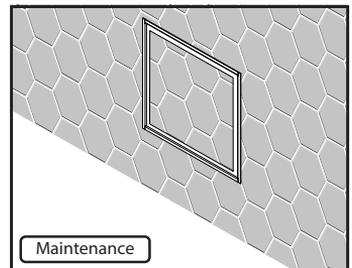

Maintenance

To hardwire electrical, have an electrician repeat steps #1 & #5 to access utility box.

Additional Support

support@ariavent.com / www.ariavent.com / @ariavent

Patent information

www.ariavent.com/pages/patents