



RR/TR Series Wall Base

1. MANUFACTURER

M-D PRO

5720 Ambler Drive

Mississauga, ON, Canada, L4W 2B1

T: 1-800-565-6653 | F: 905-625-4249



E-mail: service@mdteam.com

Website: www.mdpro.com

2. PRODUCT DESCRIPTION

M-D PRO's Rubber Wall base is a premium product manufactured with 100% virgin material. Advanced co-extrusion technology allows for a tough scuff-resistant surface while maintaining excellent overall flexibility and ease of installation. The thick gauge covers most wall imperfections and the unique "v-Groove" glue lines provide greater surface area on back of base for vastly improved contact area.

Available Styles

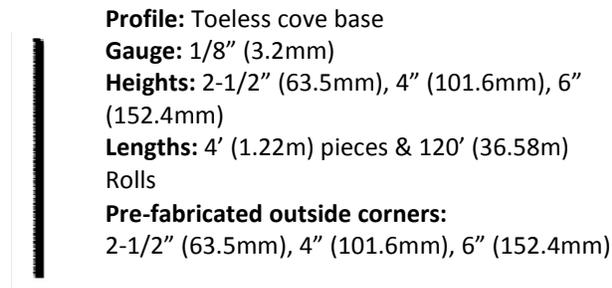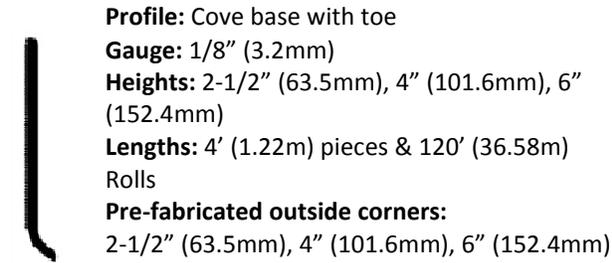

3. TECHNICAL DATA

ASTM F 1861-98

4. LIMITATIONS

M-D PRO's rubber wall base is for interior use only. Do not install on any surface that is or has been exposed to moisture or extreme temperature changes. Keep away from oils and greases. Fading of the material can occur with extensive exposure to sunlight or ultra-violet rays.

5. INSTALLATION

General Preparation:

The Wall Base, Installation Area, and Adhesive MUST be maintained at 65°F to 75°F (18°C to 24°C) for at least 24 hours prior to the installation, during the installation, and after the installation.

Substrate (surface the base will be installed on) must be structurally sound, such as dry plaster, cured drywall, exterior grade plywood (Group 1, CC type), concrete, and masonry. Plaster and cement must be thoroughly dry and cured. All surfaces must be free from moisture, alkali, old adhesive, wax, oil, grease, loose paint, plaster, non-porous wall covering or paints, and other non-porous coating that could prevent a successful adhesive bond.

NOTE: Wall Base CANNOT be installed over vinyl wall covering or other non-porous wall coverings such as rubber, laminated masonite, plastic laminate, wallpaper, non-porous paints, or fresh paint that has not cured. If your situation requires installing Wall Base in a room that has a non-porous wall covering, you must remove the wall covering and expose the wall surface prior to installing the Wall Base. Dry fit your wall base and put a mark 1/4" below the top of your Wall Base, then using a straight edge cut wall covering and remove.

For painted surfaces, first 'rough-up' the paint using 120 grit sandpaper making sure you don't go above the height of the Wall Base.



Wall base must be left in the area of installation for a minimum of 24 hours prior to installation so that it acclimates to the installation environment.

1. Ensure that the wall surface (to the height of the Wall Base) is clean, dry, smooth, and free of loose paint. Use shears or a razor knife to cut the Wall Base to the appropriate length for your application.
2. Ensure that the gap between the floor and the wall does not exceed 1/4".
3. Spread the Wall Base adhesive evenly onto the back of the Wall Base (the side that has the horizontal lines embedded in the Wall Base material) with a 1/8" saw-tooth notched trowel or Wall Base Cartridge gun and adhesive applicator. At least 90% of the Wall Base must be covered with adhesive. DO NOT apply adhesive to the top 1/4" of the Wall Base to ensure that the adhesive does not ooze up and become exposed on the wall surface above the Wall Base once installed.
Follow the adhesive manufacturer's installation instruction prior to applying the adhesive.
4. Press the Wall Base into place immediately after applying the adhesive. The adhesive MUST NOT "skin over" or begin to dry-out prior to attaching the Wall Base to the wall. Butt the Wall Base ends firmly together, so that the top of the Wall Base fits tightly against the wall and against the previously installed piece of Wall Base.
NEVER stretch the Wall Base during installation.
5. Using a hand roller, lightly press the Wall Base and adhesive to the wall. Be sure to roll the Wall Base toward the last installed piece to prevent stretching of the Wall Base. This will avoid problems with gaps between each section of Wall Base.
6. After installation is complete, remove excess adhesive immediately (if any) using a soft cloth slightly dampened with warm water. Do not use mineral spirits or cleaners of any kind to clean the Wall Base after the installation.
7. Do not disturb the Wall Base for 48 hours after installation to allow the adhesive to properly set-up.

CORNERS:

When applying Wall Base to corners, be sure to groove out the back of the base using a cove base gouge before bending it around outside corners.

6. MAINTENANCE

Caution: Some cleaning agents, floor maintenance products and pesticides may stain or damage the surface of the wall base. To maintain the appearance of the wall base from year to year, simply use a soft cloth slightly dampened with warm water when cleaning. Abrasive sponges or rags are not recommended.

7. AVAILABILITY

All products are available through M-D PRO distributors. Please contact Customer Service (1-800-565-6653) or use the Distributor Locator tool on www.mdpro.com

8. TECHNICAL ASSISTANCE

Contact M-D PRO Customer Service (1-800-565- 6653) to be directed to technical service personnel.

9. SAMPLES

Contact M-D PRO Customer Service (1-800-565- 6653) for all sample requests.

10. LIMITED WARRANTY


M-D PRO's rubber wall base is warranted for a period of one year from the date of installation to be free of defects in material and workmanship. During the warranty period, M-D PRO will replace any material that has manufacturing defects at no charge. This warranty only applies to product purchase and does not include any cost associated with installation - receipt of material purchase is required. This warranty does not cover slight colour variations if different dye lots were purchased for the same job. M-D PRO excludes any liability for lost profits or any other indirect, special or consequential damages. M-D PRO reserves the right to inspect any product claimed defective. M-D PRO does not warranty product against fading or discoloration when exposed to direct or indirect sunlight.

The adhesive manufacturer is responsible for any claim that results in the product not properly adhering to the wall.



11. ARCHITECT SPECIFICATION

Flooring accessories shown in the finishing schedule as RUBBER WALL BASE shall be high resin content rubber wall base (Specify RR or TR) as manufactured by M-D PRO. All rubber base shall be a height of (Specify 2 1/2" x 4" or 6") and a height of (Specify 4 FT. strips or 120 FT. coils) in (specify toe or toeless) style. The wall base shall conform to the performance specifications for CSA-AI 26.5 and to ASTM F1861-98. The wall base shall be supplied free of surface blemishes and imperfections. Only premium quality wall base adhesives will be used for installing this product. Use of any other adhesive will void the M-D PRO warranty.

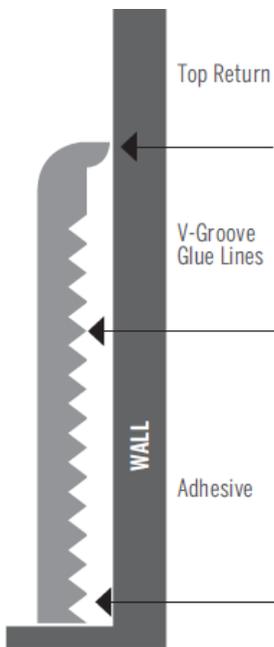

COLORS

ST 050 WHITE
ST 03 SHELL WHITE
ST 024 ANTIQUE WHITE
ST 045 SAND
ST 022 PEARL
ST 129 HARVEST WHEAT
ST 046 - BUTTER CREAM
ST 034 PUTTY
ST 09 GREY BEIGE
ST 049 BEIGE
ST 06 LIGHT BEIGE
ST 080 FAWN
ST 095 SANDLE WOOD
ST 042 SABLE
ST 130 SISAL
ST 053 MAUVE
ST 060 TAUPE
ST 07 CRANBERRY
ST 085 BURGUNDY
ST 166 TERRA COTTA
ST 781 RUSSET
ST 047 BROWN
ST 059 HEATHER GREEN
ST 190 GREEN OLIVE
ST 31 DARK FOREST
ST 014 HUNTER GREEN
ST 058 WINDSOR BLUE
ST 05 TRUE BLUE
ST 090 STEEL BLUE
ST 018 MARITIME BLUE
ST 021 PLATINUM GREY
ST 055 SILVER GREY
ST 038 PEWTER
ST 028 MEDIUM GREY
ST 071 LAKESIDE SLTAE
ST 048 GREY
ST 283 FLAGSTONE
ST 020 CHARCOAL
ST 063 BURNT UMBER
ST 150 - LANDSCAPE
ST 041 - OCEAN BREEZE
ST 030 - INK SPOT
ST 014 - TROPICAL RAIN
ST 052 - BLACK BROWN